

The start key is on the right top of the machine. Press down it to start the machine, press again to turn off the machine.




The USB port is on the middle top position. The machine will be started whenever you connect the USB to the computer.



Change battery: the battery box is on the back of the machine. Unscrew the securing screw and open the battery box cover, then replace the battery. Please use AA battery.



Keyboard description:

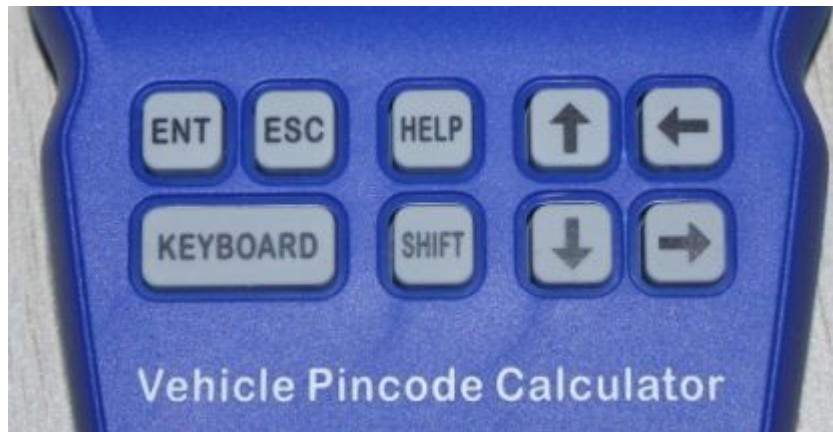

“ENT”: Enter or Conform

“ESC”: Exit or Cancel

“KEYBOARD”: Activate the Virtual Keyboard

“HELP”: to get help information.

“SHIFT”: to shift the ASCII character mode of the virtual keyboard

“Direction keys”: UP, DOWN, LEFT, RIGHT

In the selection menu, use UP and DOWN key to select function, and use LEFT and RIGHT key to Scroll page.



In the inputting menu, use UP and DOWN key to change the character, use LEFT and RIGHT key to move the cursor



In the virtual keyboard menu, use LEFT and RIGHT key to select the character

